

When using the d capo clip to form a D chord you may need to use the enclosed rubber O-ring over the G string fretter so the capo is balanced properly and does not touch the open low string.

Also take out the middle fretter that would be used to form a A chord.

Don't hesitate to contact us with any feedback or questions

sales@capoclips.com www.capoclips.com

